


# FITTING INSTRUCTIONS

## Front Lower Control Arm Front Bush Kit Ford Falcon, Fairlane, LTD, Ute Suits 8/98-on AU/NU/DU – BA


**N.B: These instructions should be used in conjunction with workshop manual.**

1. Raise the front of the vehicle and support on chassis stands, remove the front wheels from the vehicle.
2. Disconnect the ball joint, sway bar link and front and rear mounting points on the lower control arm.
3. Remove the lower control arm from the vehicle.
4. Press out the old shell bush from the arm.
5. Clean and inspect the arm where the new bushes are to be fitted for rust, paint, damage, pitting and old rubber deposits and clean or replace as necessary.
6. We recommend that the rear bush on the arm be inspected/replaced at the same time if necessary.
7. Install the new bushes with the indicator on the bush to the line in the arm casting (as per diagrams below).
8. Lubricate end faces and internal bores of the bush with grease provided and install crush tube into the bush.
9. Re-assemble the suspension as recommended in the workshop manual.
10. Tighten all components to manufacturers recommended torque settings.
11. We recommend that a wheel alignment be carried out after performing the above procedure.

**Diagram 1**

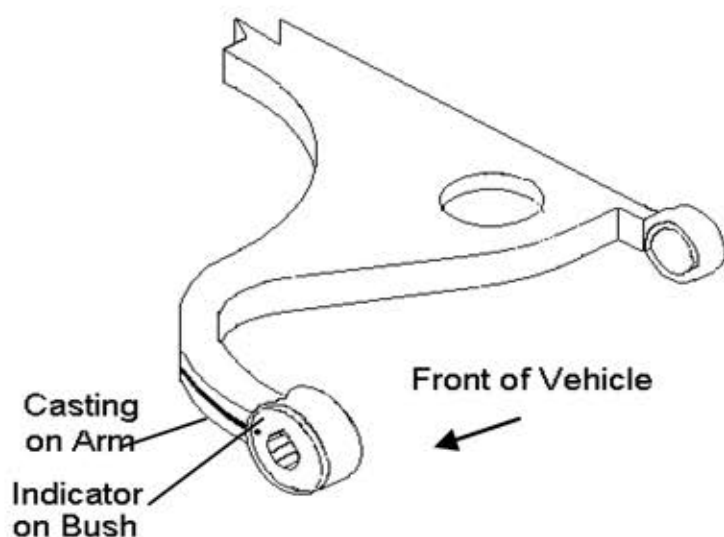

**Diagram 2**

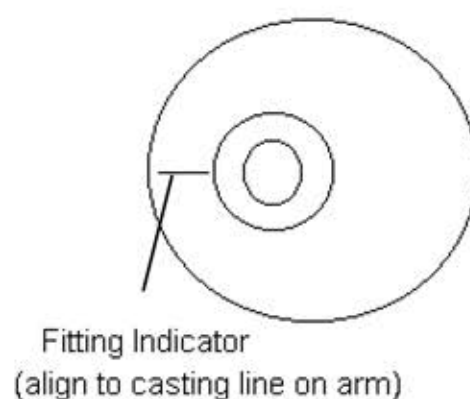

**N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.**