


FITTING INSTRUCTIONS

Suits: BA-FG Ford Falcon

Ford Territory

N.B: These instructions should be used in conjunction with workshop manual.

1. Raise the rear of the vehicle and support on chassis stands.
2. Remove the three rear trailing arm to hub retaining bolts and the two front vertical retaining nuts from the chassis and remove the trailing arm.
3. Remove the original fitted bush from the arm eyelet using appropriate press tools and discard.
4. Fit the new 6205 replacement bush to the trailing arm eyelet with voiding timed in correct position as per diagram below. **(3 VOIDS TO TOP)**
5. Refit trailing arm to vehicle.
Note: this step may be easier with suspension at normal ride height.
6. We recommend a wheel alignment be performed at this time.

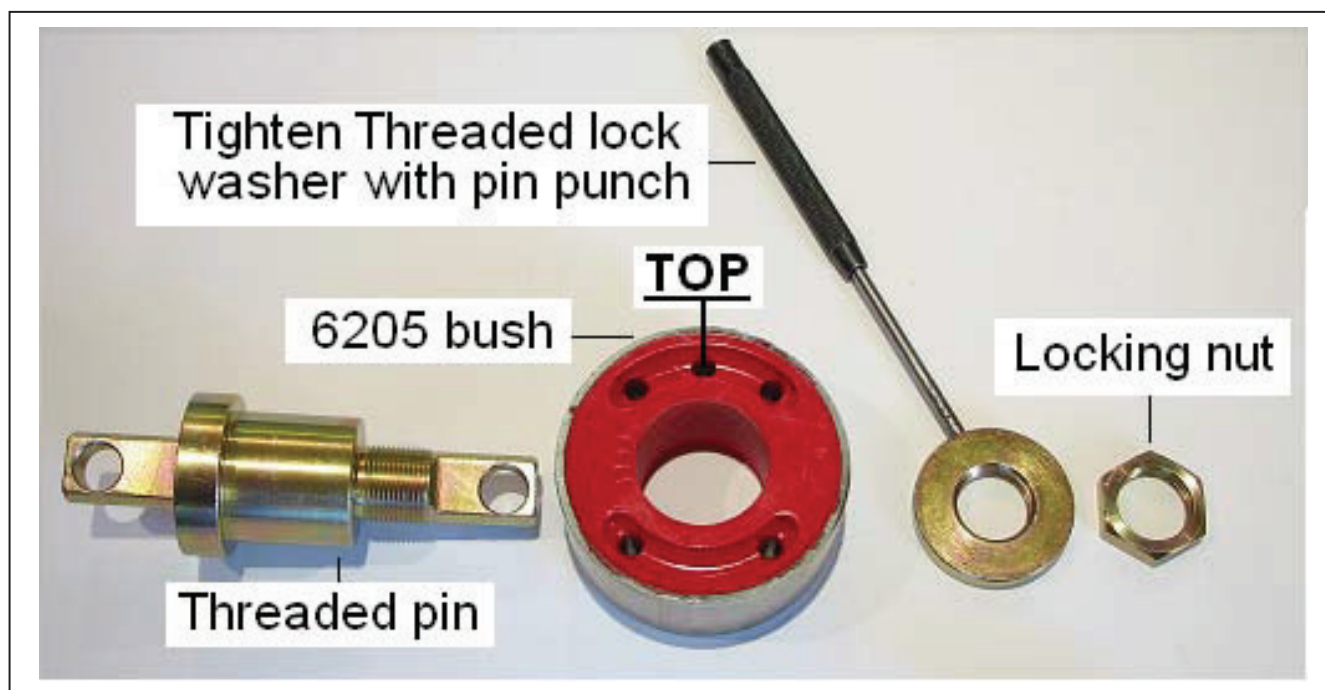

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.