


LOWER CONTROL ARM BUSHES

1. Support vehicle and disconnect lower ball joint
2. Remove wishbone
3. Remove shelled bushes from both eyes in the arm
4. Fit shelled bushes to eyes in arm and press to swage mark on the bush shank (see diagram). Take care to support the arm with spacers around eye to minimize damage to the arm.

Bushes numbered 1027 & 1028 are dimensionally different. Refer to the part number on the bush head or compare with drawings on the sheet.

5. Lubricate end faces and bores of the bushes with grease provided and reassemble suspension as recommended in the workshop manual.
6. Tighten all components to manufacturer's recommended torque settings.

Flanges to be installed towards REAR of car

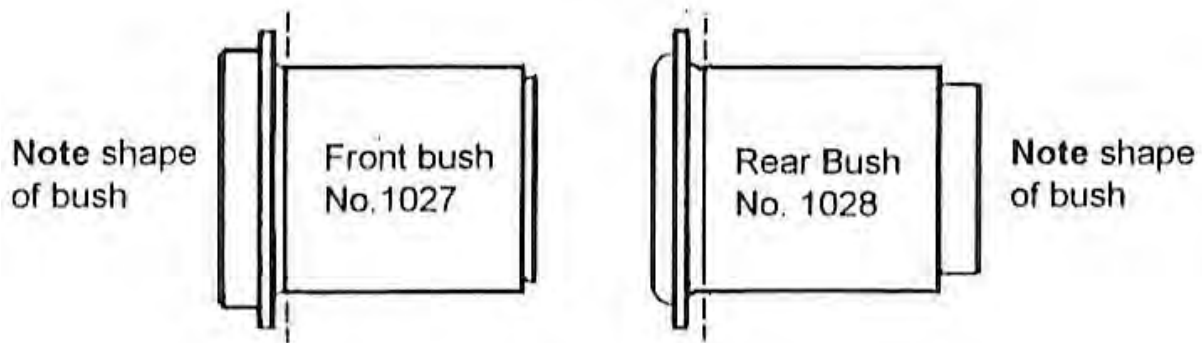

This procedure must be carried out by a qualified person