

STABILISER BARS

General Fitting Instructions;

Code: 1

When fitting sway bars be sure to follow the procedures set out in the instruction sheets supplied with the bar. Pay particular attention to tensioning link bush nuts as it is critical that they are not tightened to the point that they distort the bush.


PLEASE DRIVE CAREFULLY AND ACCUSTOM YOURSELF TO THE FLATTER RIDE AND IMPROVED HANDLING CHARACTERISTICS OF YOUR VEHICLE.

Specific Instructions For This Bar

This bar is fitted directly below and clamp to the front Tie Rods (or Strut bars).

1. Place swaybar under the Tie Rods so that the arms of the swaybar run parallel to the Tie Rods.
2. Position the D-bushes supplied onto the swaybar and tie rods. Using the saddles, nuts and bolts supplied clamp the two bars together as shown in the diagram A below.
3. **For Part numbers BHF34 and BHF36 only.** These bars are supplied with a small U-bolt kit that are to be fitted over the cross member. Place U-bolts around chassis to cross member (besides gearbox). Use the D-bushes, plates and bolts supplied to fix the bar to the U-bolt. See diagram B below.

A.

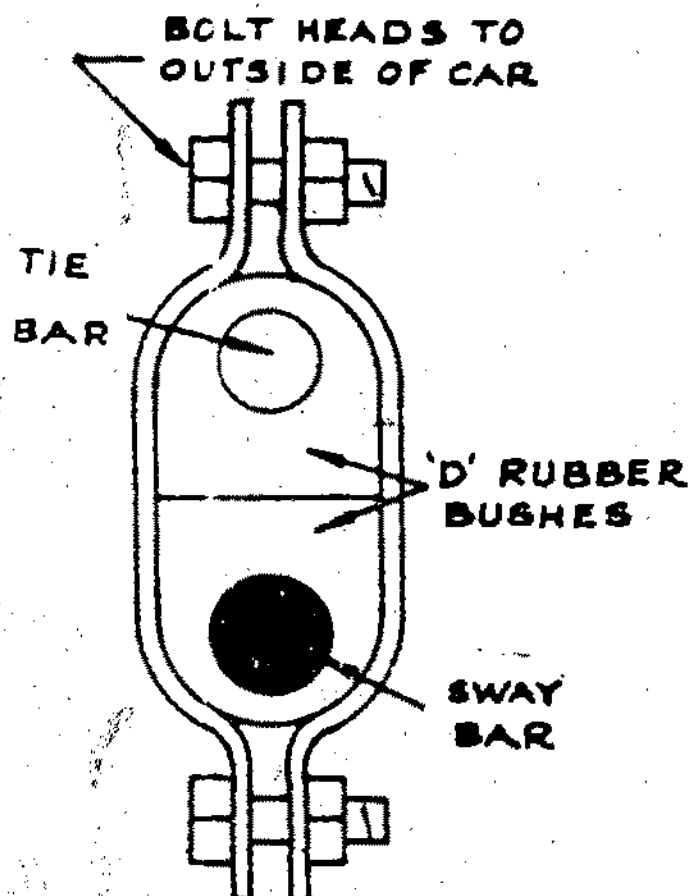

CLAMP ASSEMBLY

B.

