

Front arm Rear Bushing - Motorsport


N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.



Application: Mitsubishi Evolution X

Note - record wheel alignment settings prior to install.


Install supplied cir-clip on underside of arm

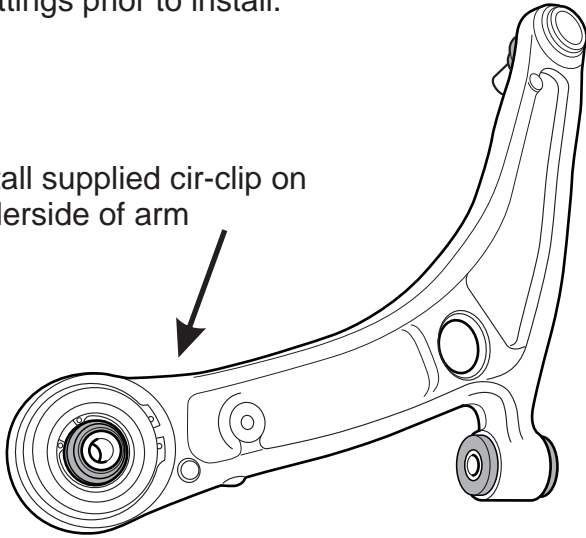

1. Raise vehicle evenly and safely support.
2. Proceed to remove front wheels and lower control arms.
3. Using a Press, remove original bushings.
4. Using an aluminium press face, slowly press in Motorsport housing from top side - refer image below. Do not push on bearing.
5. Install supplied cir-clip on underside.

Note - a wheel alignment must be carried out prior to driving.

6. Re-fit arm to vehicle and tighten bolts to manufacturers specifications

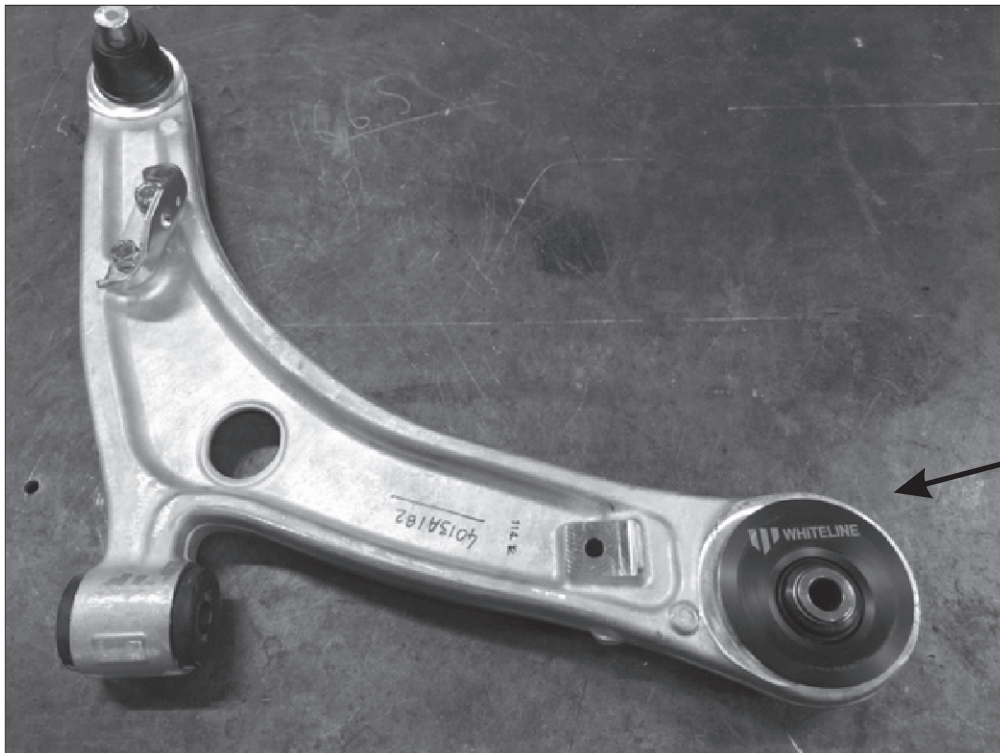

Note WHITELINE logo pointing to outside of vehicle

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.