

# Instruction Sheet

## Lower Inner Front Bushing

Suits: Toyota Camry SDV10 12/92-97

**N.B:** This instruction sheet should be used in conjunction with the workshop manual



Instruction:

1. Safely raise vehicle and safely support.
2. Remove arms from car and proceed to remove lower inner bushing and OE pin.
3. Confirm OE pin and arm eyelet are clean. Grease ID and face of supplied bushing (67488) and slide over OE pin.
4. Install bushing and pin into arm eyelet - please see Fig. 2.
5. Place supplied bushing 67489 over steel pin - please see Fig. 3. Grease the ID and face.
6. Re-install arm to vehicle - re-use OE locking tab - confirm this pushed up against the bushing.
7. Carry out a wheel alignment.

Re check all bolts after initial 100kms travelled.

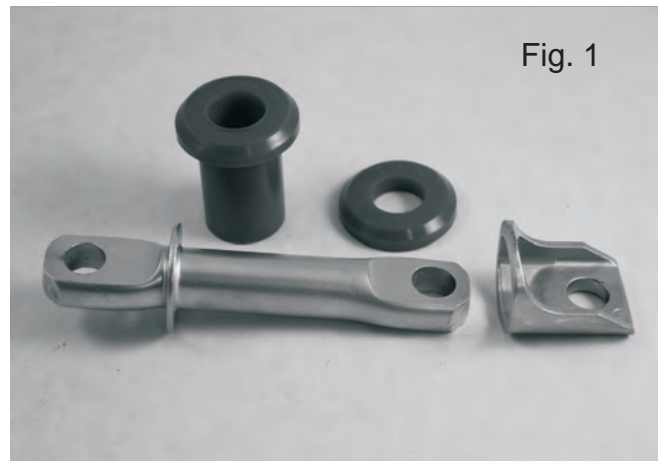


Fig. 1



Fig. 2



Fig. 3

**N.B:** It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.