


INSTALLATION GUIDE

Lower control arm

ZW53454

1. Support the vehicle
 2. Remove lower control arm as per workshop manual
 3. Press old bushings from the control arm.
 4. Set up arm in a suitable press and fit new bushes taking note of the correct orientation of the offsets
Front bush – offset in
Rear bush – offset.
- Refer to the image below.**
5. Lubricate end faces and bores of bushes with grease provided before reinstalling the control arm
 6. Reassemble suspension according to the manufacturers' workshop manual
 7. Tighten all components to manufacturers' recommended torque settings
 8. Wheel align and road test

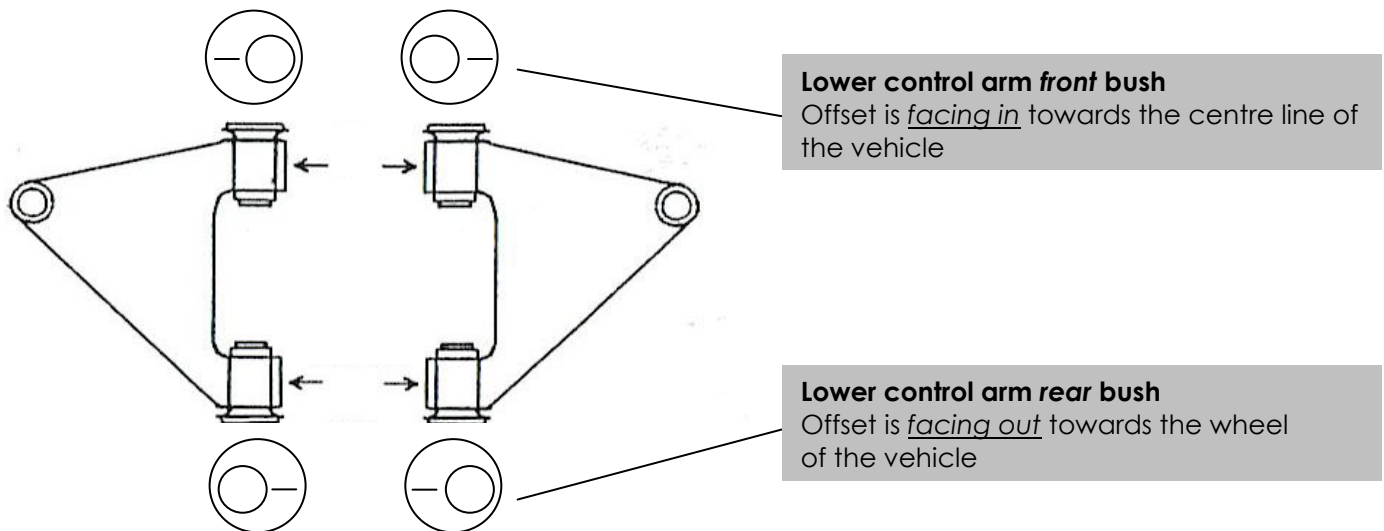

This procedure must be carried out by a qualified person