

Fitting Instructions

BPR20Z, BPR20XZ

WHITELINE

AUTOMOTIVE *Flat out*

PO Box 5666, Minto, NSW, 2566 Australia
 Ph: 61 2 9603 0111 Fax: 61 2 9820 2500
 E-mail: admin@whiteline.com.au
 A.B.N. 68 073 002 034

Code: Z353

Application:

Full kit rear swaybar to suit:

Peugeot 206 98-05 1.6L & 2.0L incl GTi

Always refer to current catalogue for complete application listing.

Specifications:

BPR20Z - 18mm adjustable full kit swaybar

BPR20XZ - 20mm adjustable full kit swaybar

Contents:

- 1 x swaybar
- 2 x swaybar mount bushes
- 2 x bush saddles
- 2 x axle brackets
- 2 x chassis brackets
- 2 x link assemblies
- 4 x 3/8" * 1.0 inch bolts (short)
- 2 x 3/8" * 1.75 inch bolts (medium)
- 2 x 3/8" * 2.0 inch bolts (long)
- 4 x 3/8" flange nuts
- 4 x 3/8" nyloc nuts
- 8 x 3/8" flat washers (small)
- 4 x 3/8" flat washers (large)
- 4 x M10 spring washers
- 1 x grease bag

Fitting Instructions:

Please read complete fitting instructions and check kit components prior to fitment. Whiteline recommends that all work be carried out by a qualified technician.

Installation of this product must be done with the vehicle at normal ride height. To enable better access to the undercarriage, drive-on hoist/ramps may be used.

1. Working on one side at a time, remove rear axle front chassis mount bolt and fit new chassis bracket as shown in photo 1. Refit original bolt and tighten to manufacturers torque specifications.
2. Remove rear shock absorber axle mount nut and fit new axle bracket as shown in photo 2. Refit original nut and tighten to manufacturers torque specifications.
3. Repeat steps 1 and 2 on the opposite side of the car.
4. Position swaybar in place, as shown in photo 5.
5. Apply grease to the inside of poly D-bushes, and fit onto the swaybar.
6. Using new short bolts, small flat washers, spring washers and bush saddles, attach the swaybar to new chassis brackets as shown in photo 3.
7. Using remaining hardware and new links, connect the swaybar to the axle bracket, as shown in photo 4 and figure 2. For adjustable type swaybars, refer to figure 1 for swaybar adjustment guide.
8. Tighten all nuts and bolts.
9. Check & re-tension all fittings again after 100km's but no more than 200km's.

For noise and friction free operation, carry out periodic inspections and maintain proper bush lubrication.

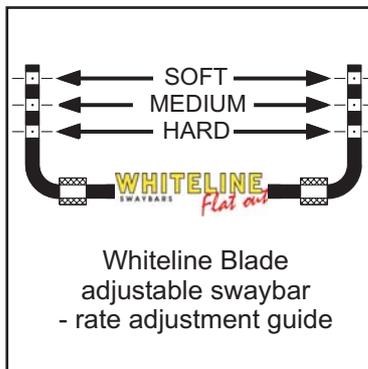


Figure 1.

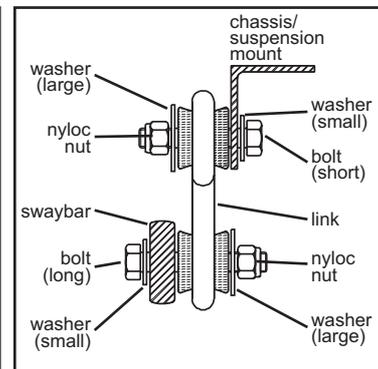


Figure 2.



Photo 1.



Photo 2.



Photo 3.



Photo 4.



Photo 5. BPR20XZ complete assembly

Warning: Please drive carefully while you accustom yourself to the changed vehicle behaviour.